



Coving Fixing Instructions

Please read all the fixing instructions carefully before commencing/ fixing.

The tools you will need:

- ◆ Mitre Block/Box
- ◆ Clean Damp Cloth
- ◆ Pencil
- ◆ Hammer
- ◆ **Decorgrip, Adhesive & Decorgrip Plus joint adhesive**
- ◆ Woodworking Saw
- ◆ Tape Measure
- ◆ Panel Pins

We recommend that Decorgrip Plus should be used to fix all coving over the size of 12cm x 12cm

Preparation

Ensure the ceiling and wall surfaces are clean, sound, flat, dry and free from grease and loose particles. New or bare surfaces should be primed.

Marking out

Hold a length of coving in position and trace the bottom line underneath around the room in pencil.

ALL MEASUREMENTS ARE TAKEN ALONG THIS LINE.

Using the NMC - Copley Mitre Block

Place the moulding in the mitre block with the pattern upside down. Have the horizontal side of the mitre block nearest to you. Secure the cornice at right angles with the moveable stops.

Remember, the upright side of the mitre block represents the Wall and the flat side the ceiling!

THEN:



To mitre the LEFT SIDE of a corner, cut through:

- THE LEFT FOR INSIDE MITRE
- THE RIGHT FOR OUTSIDE MITRE

To mitre the RIGHT SIDE of a corner, cut through:

- THE RIGHT FOR INSIDE MITRE.
- THE LEFT FOR OUTSIDE MITRE.

STILL NEED HELP ? THEN CALL US ON 01969 623410

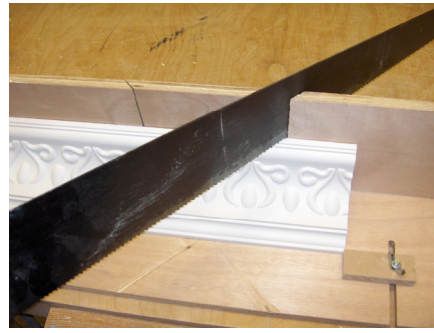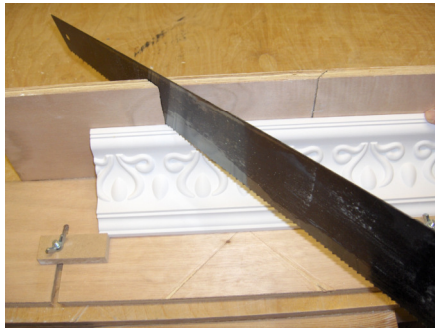

Fixing

- Start in a corner of the room and work round.
- Be sure to apply plenty of adhesive at joints, ensuring a good bond is achieved.
- **Use Decor grip Plus for all joints and fixing all covings over 12cm x 12cm.**
- Rest the coving on the panel pins and push firmly into position.
- **Put panel pins vertically into the ceiling to hold the coving in position.**
- **Put panel pins through the top and bottom edges of the coving at the end of each length. Punch into the face of the coving and fill over the heads.**
- When the first corner is reached, measure back from this corner to a point in the pattern repeat.
- Equalise this distance to the same point on the pattern repeat for the adjoining length.
- Continue fixing lengths, mitring and cutting to size as required.

Finishing the job

- Fill any gaps using adhesive or proprietary filler.
- Wipe off any surplus adhesive with a clean damp cloth.
- Check that no detail is clogged with adhesive or filler.
- The white finish of the product acts as an undercoat for most decorative paints.

STILL NEED HELP ? THEN CALL US ON 01969 623410